

## SF 0022

FAQ –

The clamps on my car are sealed together, how can the bush be changed?

The crimped portion of the clamp is drilled out using a 14mm or 9/16" drill, taking care only to drill out the crimp, and not the thread.

The clamp is held together by its mounting bolts in the conventional way when re-fitted.

